

# HOME DECORATORS








 





 
 

 
## collection®

### ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)  
ARTISAN COMPUTER DESK



### Hardware List :

| ITEM     | DESCRIPTION        | Part  | QTY   | ITEM     | DESCRIPTION      | Part  | QTY   |
|----------|--------------------|---|-------|----------|------------------|---|-------|
| <b>A</b> | Cam Bolt           |  | 16PCS | <b>J</b> | Bolt             |  | 4PCS  |
| <b>B</b> | Cam Lock           |  | 16PCS | <b>K</b> | Spring Washer    |  | 4PCS  |
| <b>C</b> | Wooden Dowel       |  | 16PCS | <b>L</b> | Washer           |  | 4PCS  |
| <b>D</b> | Handle             |  | 1PC   | <b>M</b> | Allen Wrench     |  | 1PC   |
| <b>E</b> | Screw<br>Ø3.5*30mm |  | 8PCS  | <b>N</b> | Hinge            |  | 2PCS  |
| <b>F</b> | Bolt For Handle    |  | 6PCS  | <b>O</b> | Hinge            |  | 2PCS  |
| <b>G</b> | Handle             |  | 2PCS  | <b>P</b> | Screw<br>Ø3*12mm |  | 12PCS |
| <b>H</b> | Shelf Support      |  | 4PCS  | <b>Q</b> | Wooden Plug      |  | 2PCS  |
| <b>I</b> | Screw<br>Ø4*15mm   |  | 12PCS |          |                  |   |       |

 

 
 
 
 
 
 
 
 
# HOME DECORATORS

 
 

 





collection®

## ASSEMBLY INSTRUCTION

  ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)  
ARTISAN COMPUTER DESK

### PART LIST:

| ITEM | DESCRIPTION             | Part  | QTY |
|------|-------------------------|---|-----|
| 1    | Drawer Front Panel      |    | 1PC |
| 2    | Drawer Left Side Panel  |    | 1PC |
| 3    | Drawer Right Side Panel |    | 1PC |
| 4    | Bottom Panel            |  | 1PC |
| 5    | Drawer Back Panel       |  | 1PC |
| 6    | Right Front Rail        |  | 1PC |
| 7    | Right Back Panel        |  | 1PC |
| 8    | Middle Panel            |  | 1PC |
| 9    | Right Side Panel        |  | 1PC |
| 10   | Left Front Rail         |  | 1PC |

| ITEM | DESCRIPTION               | Part  | QTY |
|------|---------------------------|---|-----|
| 11   | Bottom Panel              |    | 1PC |
| 12   | Left Side Panel           |    | 1PC |
| 13   | Keyboard Tray Front Panel |    | 1PC |
| 14   | Keyboard Tray             |  | 1PC |
| 15   | Left Back Panel           |  | 1PC |
| 16   | Top Panel                 |  | 1PC |
| 17   | Adjustable Shelf          |  | 1PC |
| 18   | Door                      |  | 1PC |
| 19   | Plastic Grommet           |  | 1PC |
|      |                           |   |     |

# HOME DECORATORS

collection®

## ASSEMBLY INSTRUCTION

 
ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)

ARTISAN COMPUTER DESK

- \* Before discarding the packing material, please confirm that all parts and hardware are present
- \* Be sure to assemble on a soft, clean surface
- \* Be sure to follow the instructions
- \* You will need two people to assemble this product
- \* A few days after assembly, it might be a good idea to tighten the hardware again

### \* Cam lock system installation procedure

Adjust the lock so the arrow is pointing to the bolt hole. The opening in the lock should slide over the head of the bolt. Use a screwdriver to tighten the lock clockwise

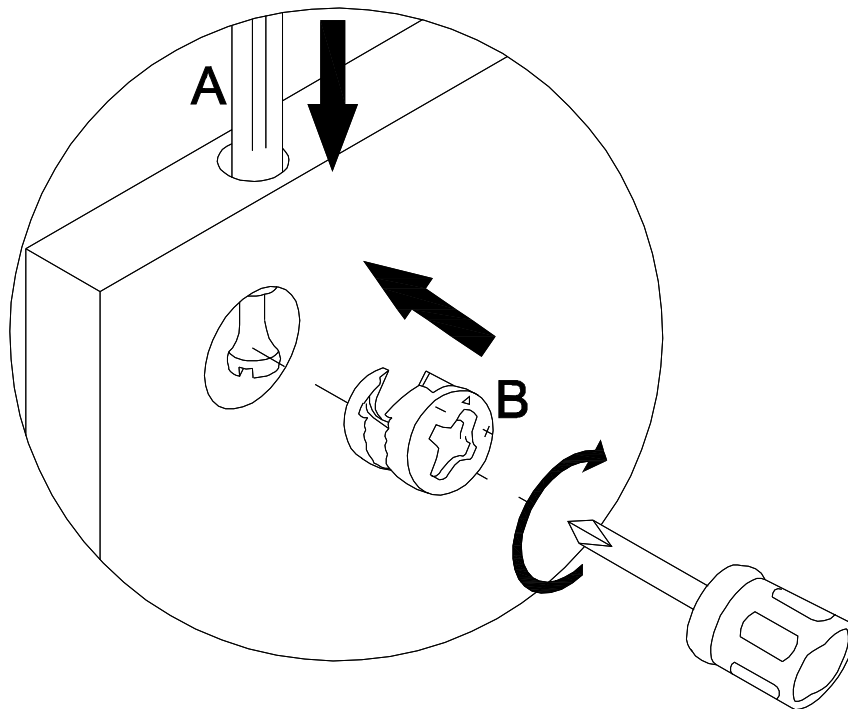

# HOME DECORATORS

 
collection®

## ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)  
ARTISAN COMPUTER DESK


### STEP 1

Assemble the Drawer Front (1), Drawer Sides (2 & 3), Drawer Back (5) and Drawer Bottom (4) by using Screw (E)

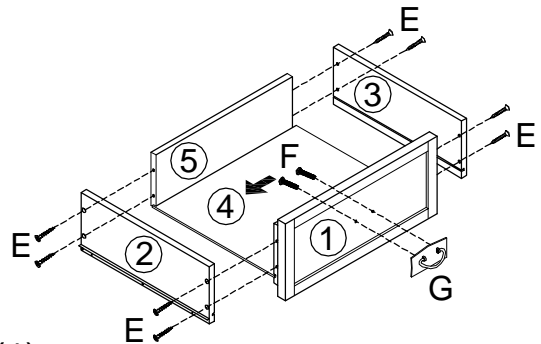

Install the Handle (G) to the Drawer Front (1) by using Bolt (F)

### STEP 2

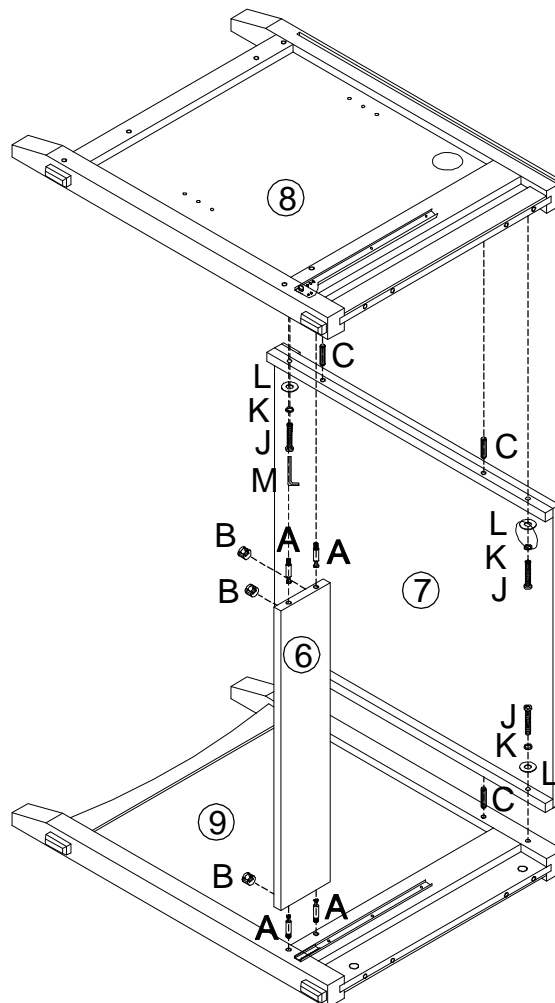 

Assemble the Right Front Rail (6), Right Back Panel (7), Middle Panel (8) and Right Side Panel (9) by using Bolt (J), Washer (K & L), Cambolt (A), Camlock (B) and Dowel (C).

# HOME DECORATORS

 
collection®

## ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)

ARTISAN COMPUTER DESK

### STEP 3

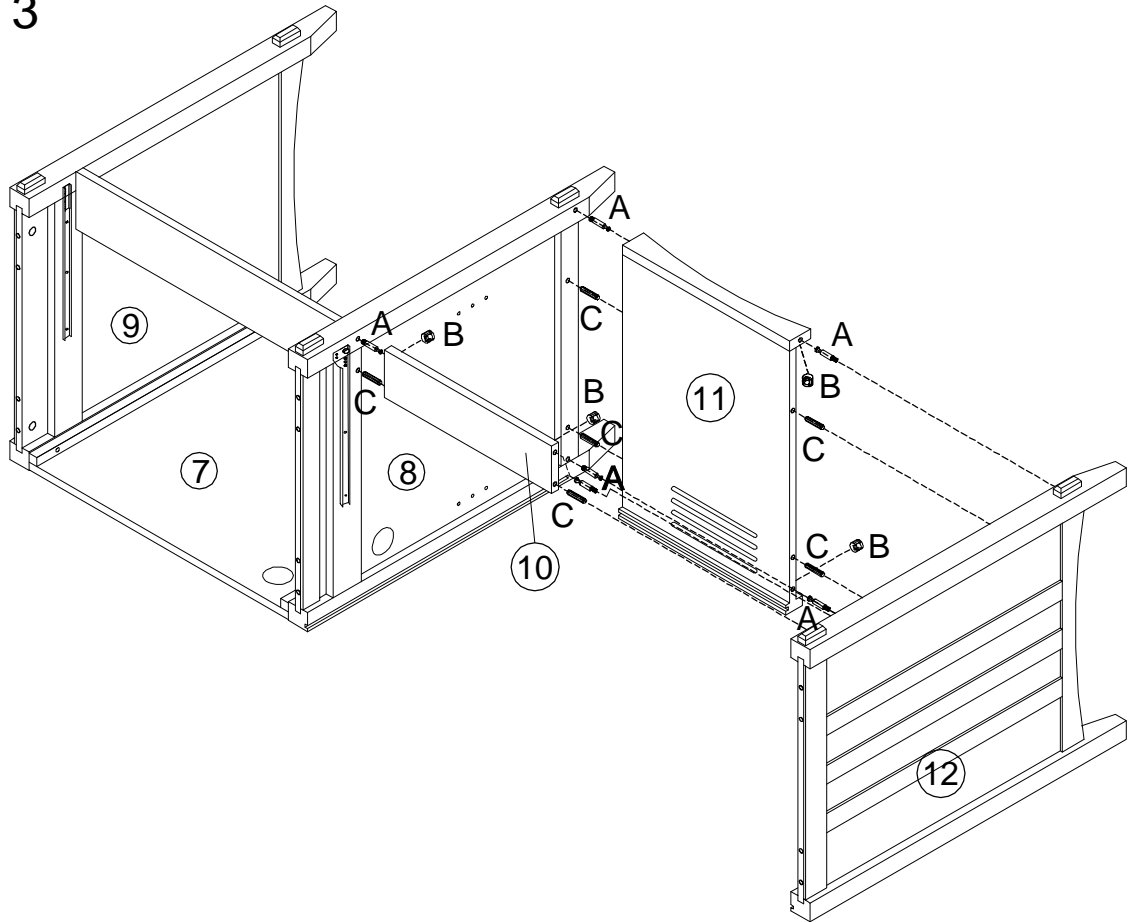



Assemble the Left Side Panel (12), Left Front Rail (10) and Bottom Panel (11) to the unit from STEP2 by using Cambolt (A), Camlock (B) and Dowel (C).

### STEP 4

  Install the Handle (G) to the Keyboard Tray Front Panel (13) by using Bolt (F)

Assemble the Keyboard Tray Front Panel (13) to the Keyboard Tray (14) by using Hinge (O) and Screw (P).

Install the Wooden Plug (Q) to the screw holes in the Keyboard Tray Front (13)

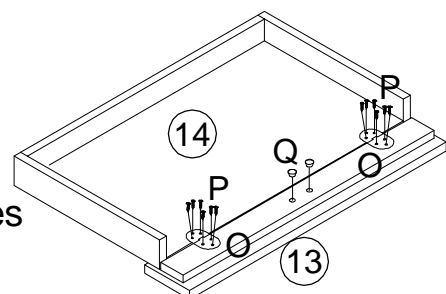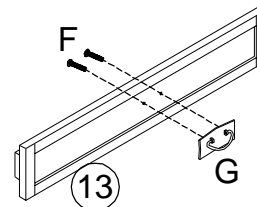


# HOME DECORATORS

collection®

## ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)  
ARTISAN COMPUTER DESK
 
### STEP 5

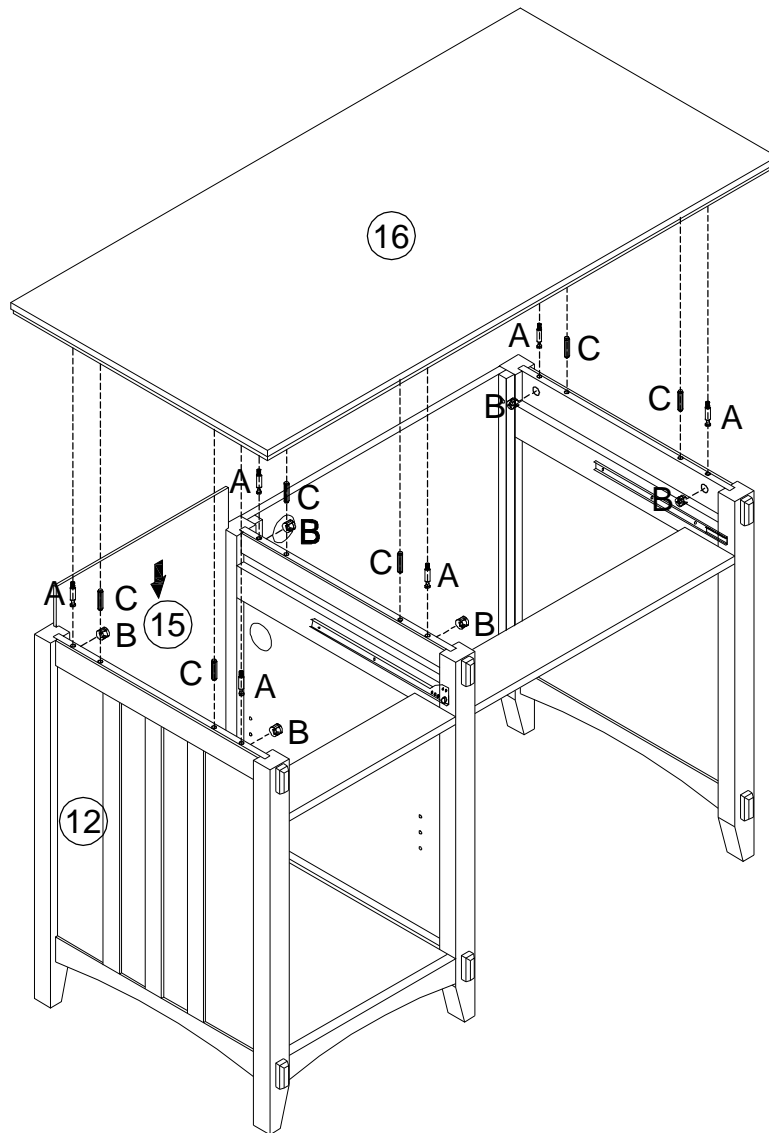

Install the Left Back Panel (15) and Top Panel (16) to the unit from STEP3 by using Cambolt (A), Camlock (B) and Dowel (C).


# HOME DECORATORS
 
## collection<sup>®</sup>

### ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)  
ARTISAN COMPUTER DESK

#### STEP 6

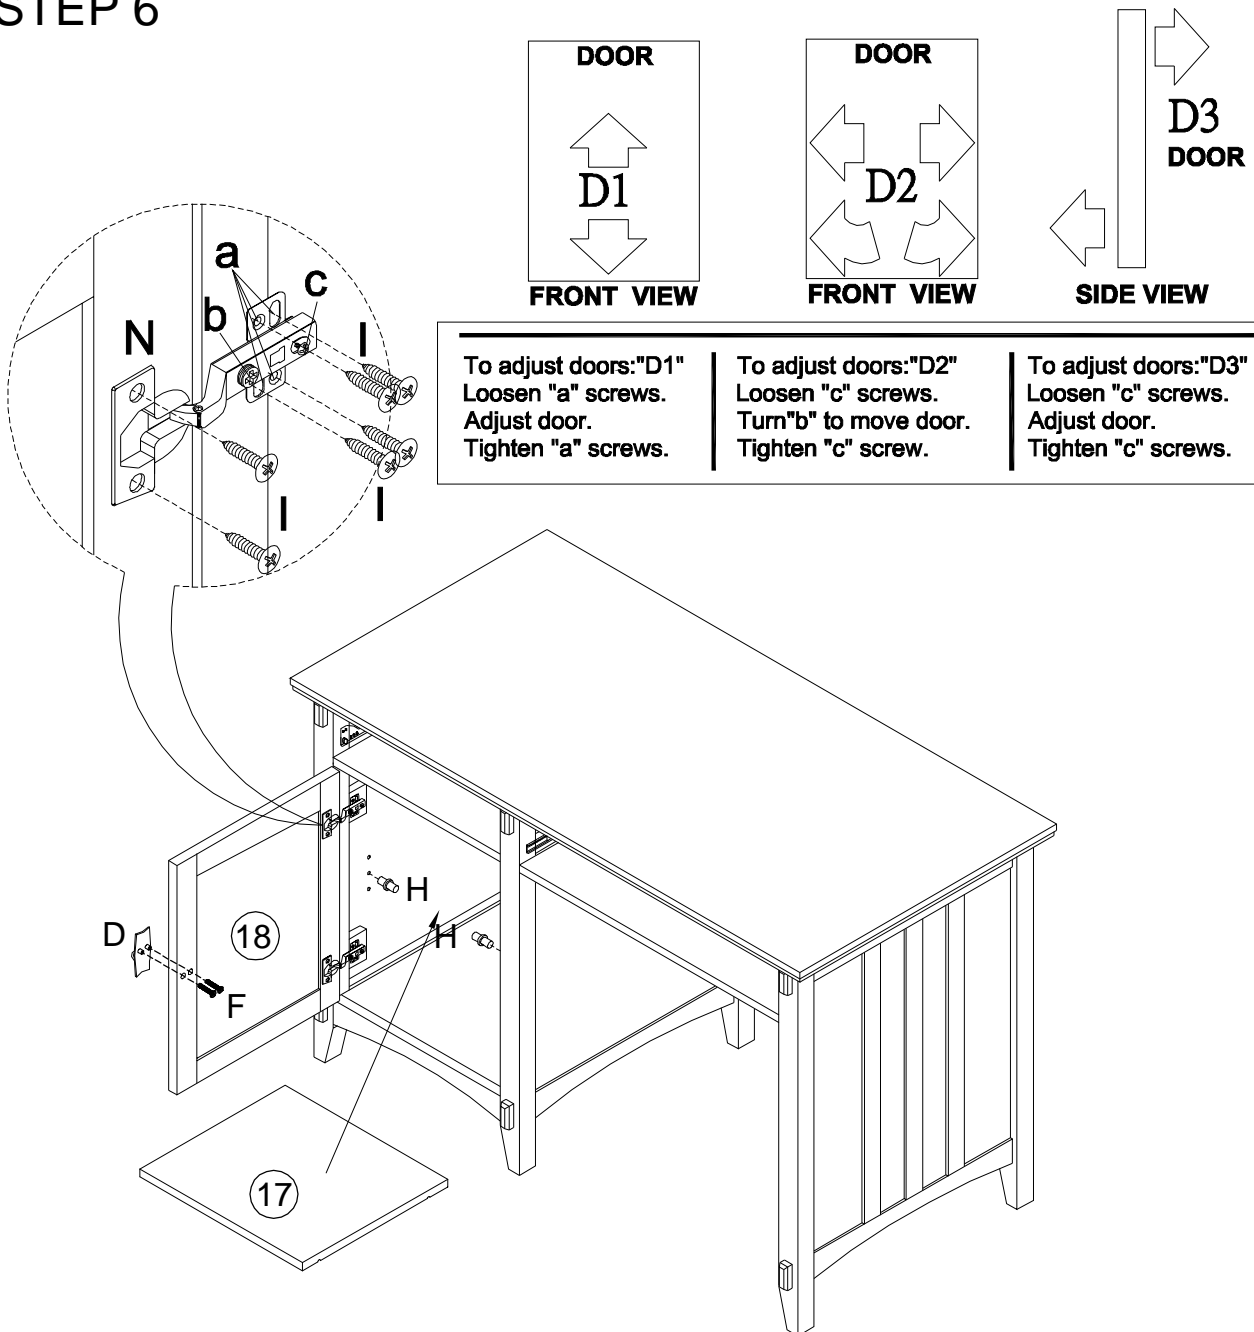

Insert the Shelf Support (H) to the holes in the Left Side Panel and the Middle Panel at the same level, then place Adjustable Shelf (17) onto them.

Install the Handle (D) to the Door (18) using Bolt (F), then install the Door (18) to the case by using Hinge (N) and Screw (I).

# HOME DECORATORS

 
collection®

## ASSEMBLY INSTRUCTION

ITEM#:HDC-NP-004 (0135600930/0135600950/0135600970)

ARTISAN COMPUTER DESK

### STEP 7

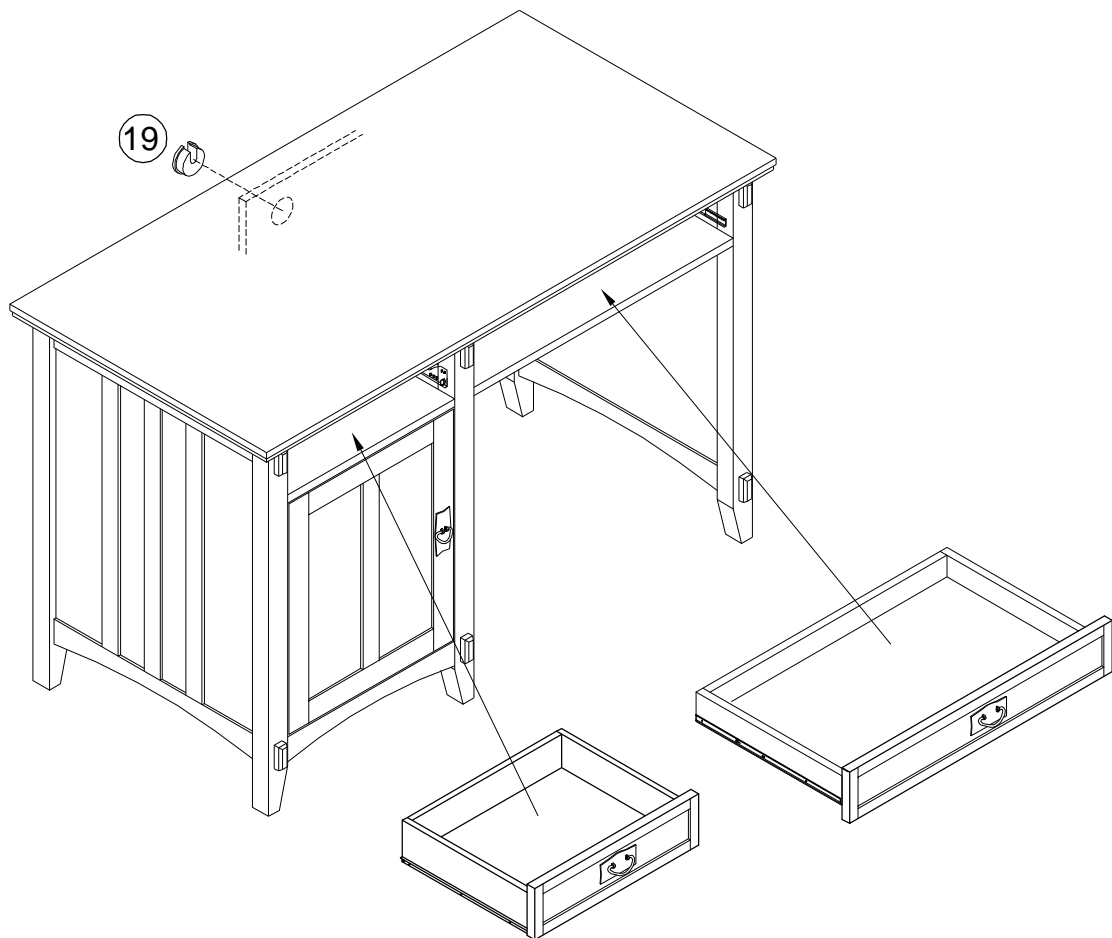

Place the assembled drawers, Keyboard Tray into the case;  
Insert the Plastic Grommet (19) to the back panel.